



## REMOTE INTERFACE SPECIFICATIONS

### **ACC 061-MCD**

**Remote PPM Indicator Assembly with Reset Switch** - Provide display of current sample area being measured. Momentary switch used to reset refrigerant monitor via external reset connections. *Note: requires OP 001 4-20 mA analog output to drive display*

**Control & Display:**

3 ½ digit digital LCD displays refrigerant level in 0 to 1000 ppm.

**Electrical:**

Requires no power. Connect Meter + and Meter – terminals on ACC 061-MCD to A1 and GND terminals on IR-SNIF-MCD (terminal board 3, terminals 1 and 3). Connect Reset and GND terminals on ACC 061-MCD to reset and GND terminals on IR-SNIF-MCD (terminal board 3, terminals 4 and 5).

**Physical:**

7" h x 7" w x 4.5" d (nominal).

